


5-Phase stepper motor driver

Wiring cable set with connector for MD-455F


CL-4F

- This product is use for MD-355F only. Do not use other product.
- Please, refer the operation manual of each driver when you using this item.


● Wiring Diagram

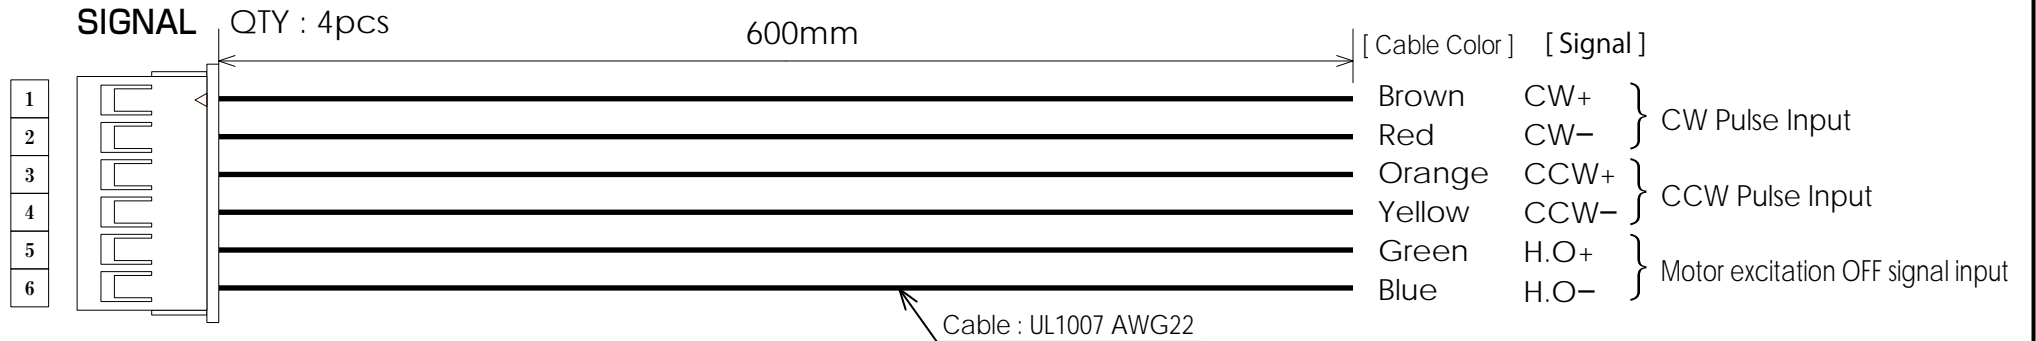

Connector Mode : JST Mfg. Co., Ltd. XAP-06V-1

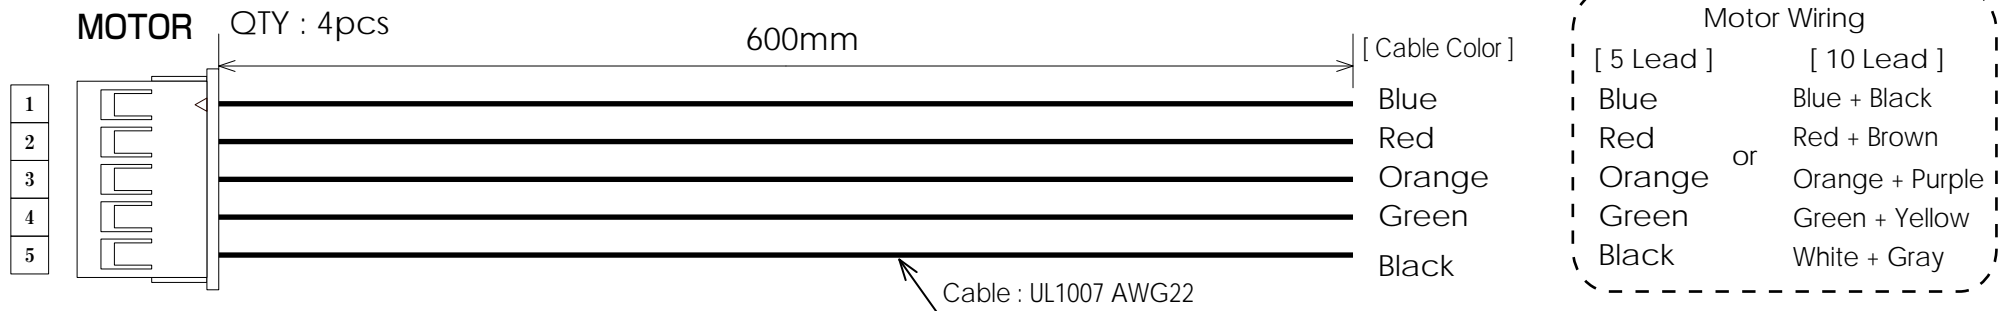

Connector Mode : JST Mfg. Co., Ltd. XAP-05V-1

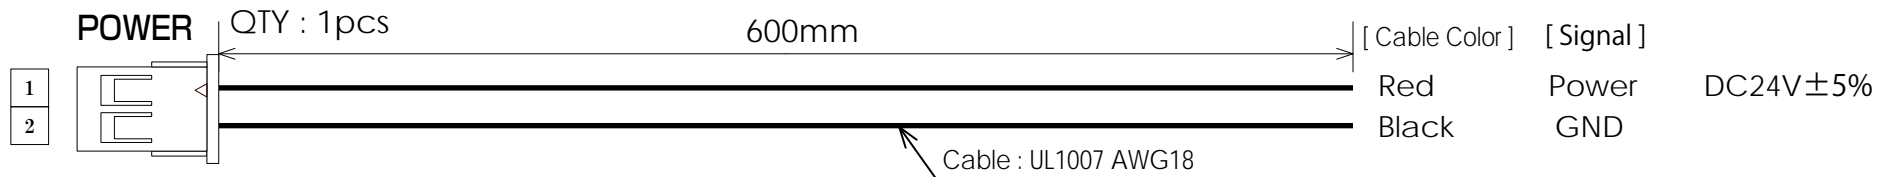

Connector Mode : JST Mfg. Co., Ltd. VHR-2N