


5-Phase stepper motor driver

Wiring cable set with connector for MD-55F


CL-1F

- This product is use for MD-55F only. Do not use other product.
- Please, refer the operation manual of each driver when you using this item.


● Wiring Diagram

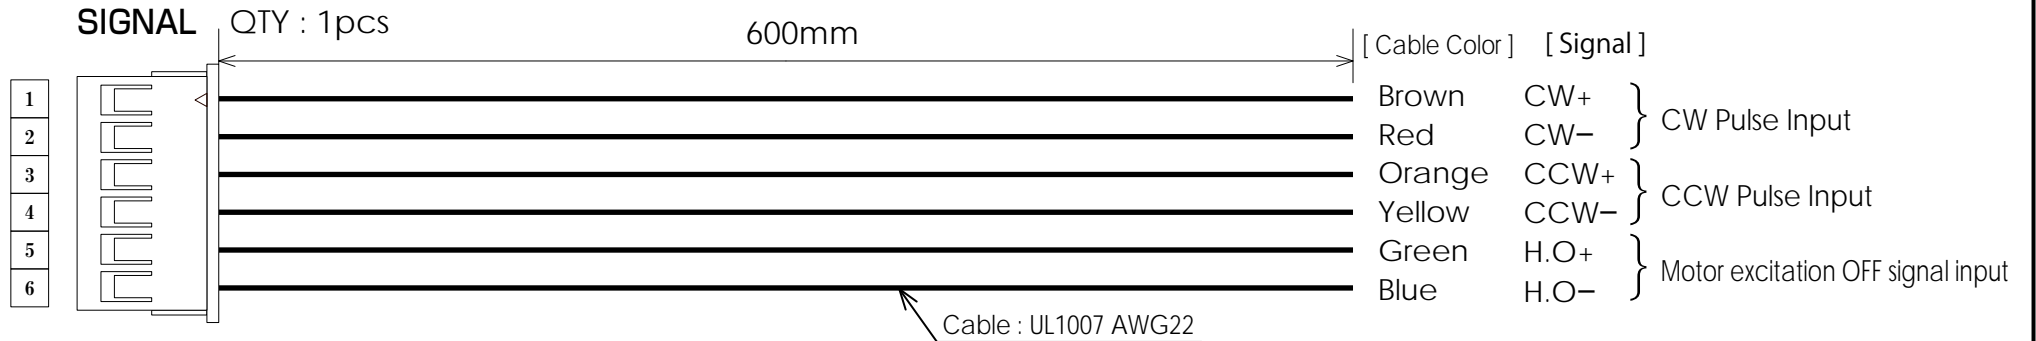

Connector Mode : JST Mfg. Co., Ltd. XAP-06V-1

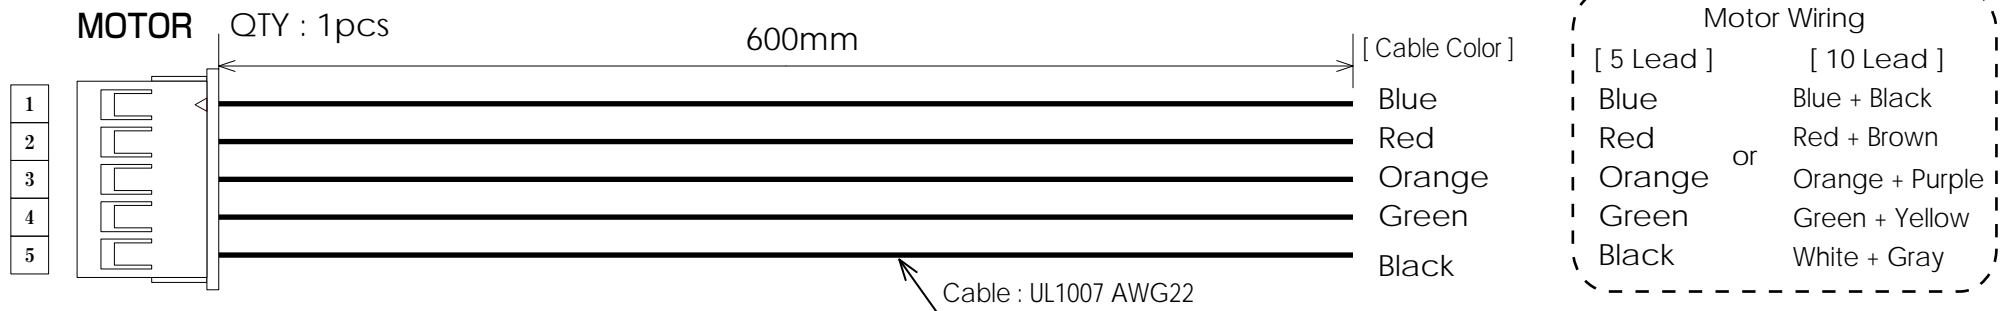

Connector Mode : JST Mfg. Co., Ltd. XAP-05V-1

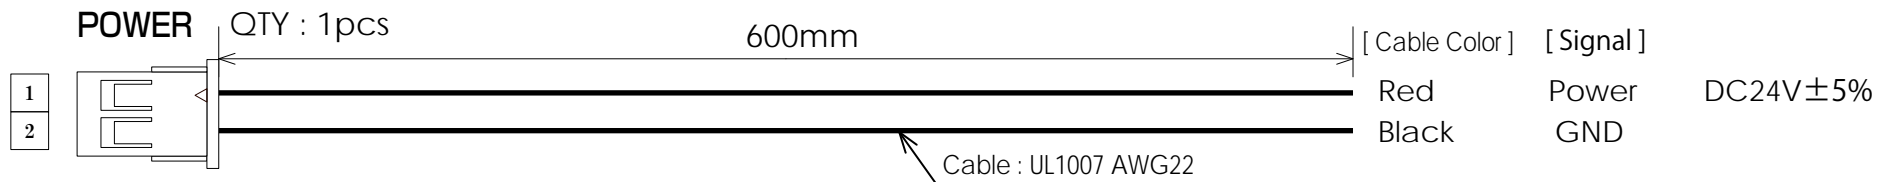

Connector Mode : JST Mfg. Co., Ltd. XAP-02V-1