


# 5-Phase stepper motor driver

## Wiring cable set with connector for MD-355F


# CL-3F

- This product is use for MD-355F only. Do not use other product.
- Please, refer the operation manual of each driver when you using this item.


### ● Wiring Diagram

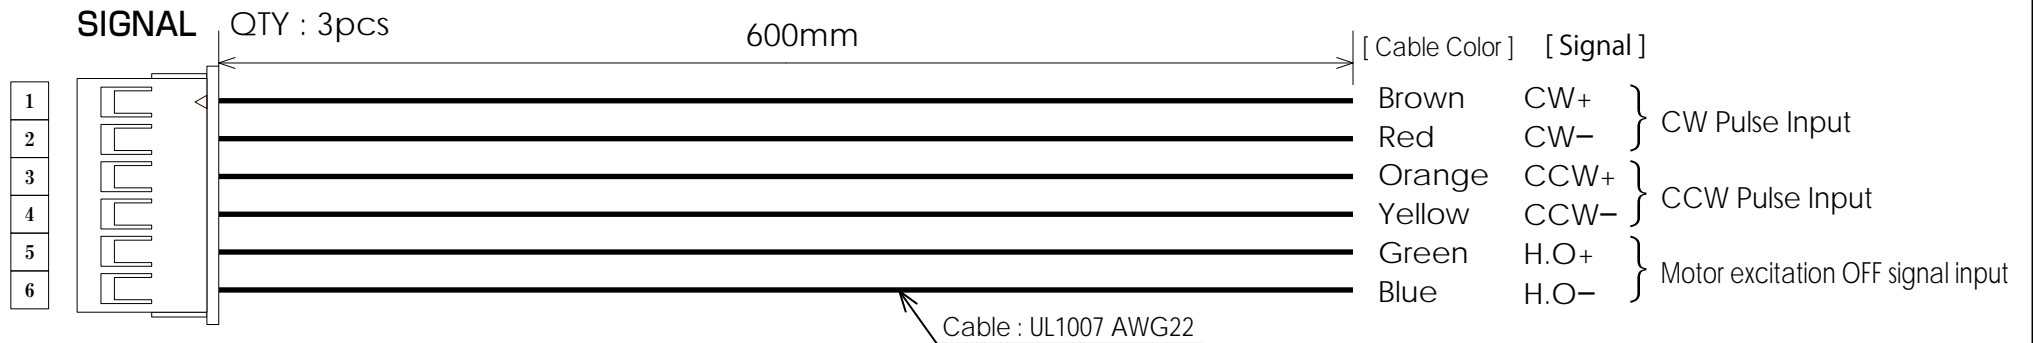

Connector Mode : JST Mfg. Co., Ltd. XAP-06V-1

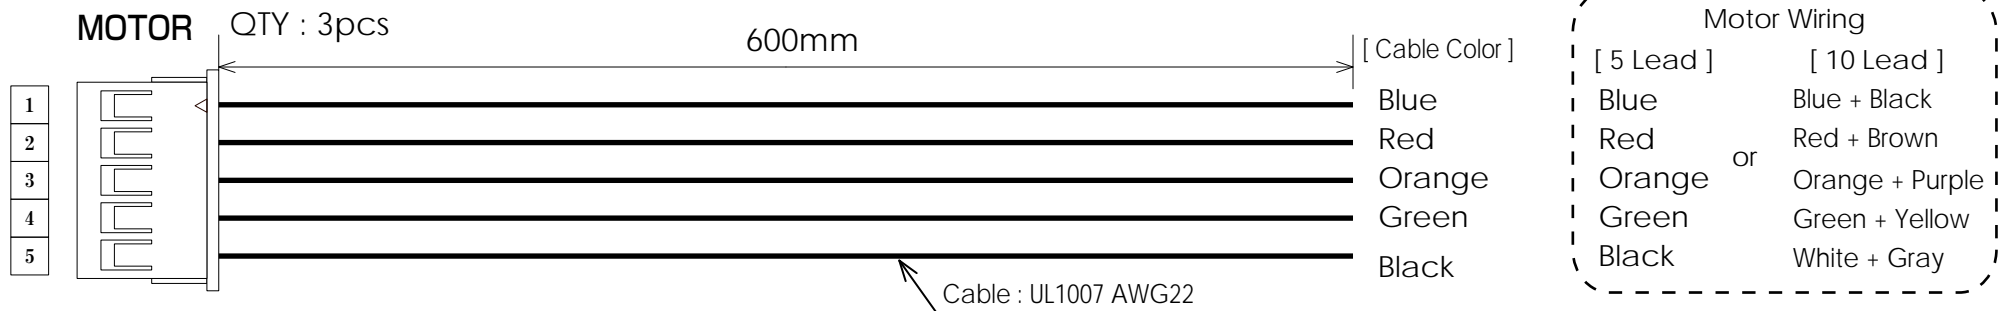

Connector Mode : JST Mfg. Co., Ltd. XAP-05V-1

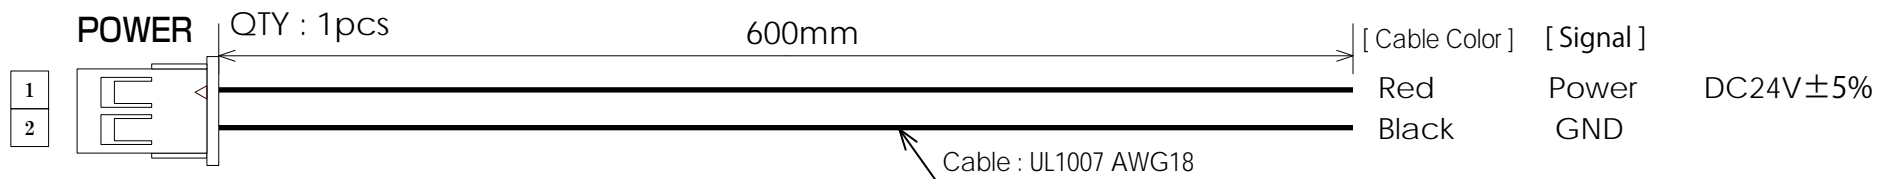

Connector Mode : JST Mfg. Co., Ltd. VHR-2N